



Fidelis Network[®] Collector SA Appliances

Quick Start Guide
Rev-K (HPE DL360 Gen10) Platforms

1. System Overview

The Fidelis Collector is the security analytics database for Fidelis Network. The Fidelis Collector SA receives network metadata from the Fidelis Network sensors (that is, Direct, Internal, Mail, and Web sensors) and stores it for ongoing analysis. The Collector SA appliance is also referred to as Collector SA2.




Figure 1: Fidelis Network – Collector SA Appliance – Rev-K

Collector SA Setup Checklist

✓ Fidelis Collector SA – Appliance Requirements
Appropriate rack space, power, and cooling (Appendix B)
Rack tools, rails, and connectors
Keyboard and video monitor / KVM switch for temporary appliance setup
Power cables – two per appliance, appropriate power source and region
Ethernet cables (cat5e) for Admin and iLO ports (Section 3)
Network switches with enough physical ports (Section 4)
Logical network information: IP addresses, hostnames (Section 5 , Appendix A)
For Fidelis software version 9.4.1 and later, the appliance type (Appendix C)

2. Documentation, Passwords, and Technical Support

Product Documentation

You can find Fidelis Network product documentation, appliance specifications, and instructions at <https://support.fidelissecurity.com> or through the  navigation item in the CommandPost user interface.

Appliance Default Passwords

System	Account	Default Password
SSH / Appliance Console	fidelis	fidelispass
CommandPost user interface	admin	system
iLO	administrator	(printed on label, top of server)



Technical Support

For all technical support related to this product, check with your site administrator to determine support contract details. For support of your product, contact your reseller. If you have a direct support contract with Fidelis Security, contact Fidelis Security Technical support at:

- Email: support@fidelissecurity.com
- Web: <https://support.fidelissecurity.com>

3. Collector SA: Network Port and Cabling Requirements

You must connect each appliance to the various networks using appropriate cables, and in some cases, SFP+ transceivers. The table below describes the physical connection and cable type associated with each port on the appliance.

Collector SA Appliance

Port Label	Physical Connection Type (default)	Cable Type (minimum)
Admin (eth0)	GbE RJ45 (copper)	Cat 5e patch cable
iLO	GbE RJ45 (copper)	Cat 5e patch cable

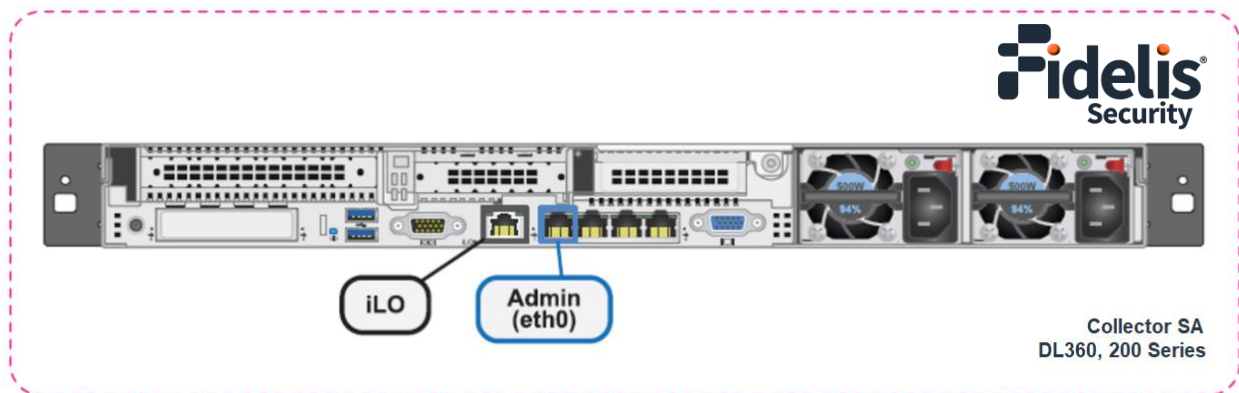


Figure 2: Rear Port Assignments – Collector SA (Rev-K)



4. Collector SA Networking Environment

Collector SA appliances use the Admin network for service and inter-node communication. The appliances also offer the iLO / IPMI interface for optional out-of-band management of the appliance.

Use the tables below to identify the count and type of switch ports necessary to support the number of appliances in your deployment.

Admin Network

The Admin network connects the Collector SA to the Fidelis sensors and CommandPost systems.

Appliance	Switch Port Type	Qty
Collector SA	GbE Copper RJ45 port	1

iLO / IPMI Network

The iLO / IPMI network is an optional network for remote/out-of-band server administration.

Appliance	Switch Port Type	Qty
Collector SA	GbE Copper RJ45 port	1

5. Appliance – Logical Network Configuration

You must assign logical network information to each physical connection. Build a table of the logical information for each appliance (sample below) that you can reference during configuration. [Appendix A](#) has a worksheet you can use.

Sample Network Configuration Table

Network Setting	Assignments	
Interface	Admin (eth0)	iLO / IPMI
Hostname (FQDN)	CollectorSA-1.organization.net	
Static IP Address	10.1.2.3	10.2.3.3
Subnet Mask	255.255.255.0	255.255.255.0
Gateway	10.1.2.1	
Proxy Server	10.5.6.7	
DNS Servers	8.8.4.4, 8.8.8.8	
NTP Servers	pool.ntp.org	
Time Zone	UTC (+0)	



6. Appliance Installation

Rack Installation

Install each appliance in an enclosure/location that has necessary power and cooling. Ensure that the installation environment is within the operating temperature of the appliance. See [Appendix B](#) for appliance operating temperature requirements.

Power

Connect power cables to the power supplies in the back of the appliance. See [Appendix B](#) for appliance power requirements.

Network Cabling

Using the connectors and cables described in sections 3 and 4, begin to connect the appliances to the networks. Cable the Collector SA appliance(s) to the switches:

1. Connect the Admin (eth0) port to the Admin switch port.
2. Optionally, connect the iLO port to the Admin (or iLO) switch port.

7. Appliance Network Configuration

Start the Appliance Network Configuration

1. Power on the appliance(s).
2. Connect to the component CLI using either of the following:
 - Via KVM Console. see [Option 1: Connect to the Component CLI Using KVM Console](#)
 - Via iLO, see [Option 2: Connect to the Component CLI Using iLO](#)

Option 1: Connect to the Component CLI Using KVM Console

1. Connect a keyboard and monitor to the appliance.
2. Continue with [Complete the Appliance Network Configuration](#)

Option 2: Connect to the Component CLI Using iLO

iLO supports DHCP by default. If you need a static IP address, before performing this procedure, first follow [Configuring iLO to Use a Static IP Address](#).

1. Log into the iLO console:

```
https://<IP address>
```

where <IP address> is the iLO IP address



2. Specify the credentials:

- Username - Administrator
- Password - A random eight-character string
- DNS name - ILOXXXXXXXXXXXX, where the X characters represent the server serial number.

The iLO firmware is configured with a default username, password, and DNS name. The default information is on the serial label pull tab attached to the server that contains the iLO management processor. Use these values to access iLO remotely from a network client by using a web browser.

3. In the iLO web interface, navigate to **iLO Integrated Remote Console**.

4. Select **Power & Thermal**.

5. Click **Reset**.

The system shuts down and restarts. For Fidelis Network appliances version 9.4.1 or later, a screen similar to below is displayed. If you do not see this screen, contact Fidelis Customer Support.

6. Continue with [Complete the Appliance Network Configuration](#).

Configuring iLO to Use a Static IP Address

Use this procedure only if you want to connect to the component CLI using iLO and you need a static IP address. Note that iLO supports DHCP by default.

1. Directly attach an ethernet cable from a client system, such as a laptop to the iLO port on the appliance.
2. Restart the machine.
3. Press F9 in the server POST screen.

The UEFI System Utilities start.

4. Click **System Configuration**.
5. Click **iLO 5 Configuration Utility**.

6. Disable DHCP:

- a. Click **Network Options**.
- b. Select **OFF** in the **DHCP Enable** menu.

The **IP Address**, **Subnet Mask**, and **Gateway IP Address** boxes become editable. When DHCP Enable is set to **ON**, you cannot edit these values.

7. Enter values in the **IP Address**, **Subnet Mask**, and **Gateway IP Address** boxes. (See [Section 5 / Appendix A](#)).



8. To save the changes and exit, press F12.

The iLO 5 Configuration Utility prompts you to confirm that you want to save the pending configuration changes.

9. To save and exit, click **Yes - Save Changes**.

The iLO 5 Configuration Utility notifies you that iLO must be reset in order for the changes to take effect.

10. Click **OK**.

iLO resets, and the iLO session is automatically ended. You can reconnect in approximately 30 seconds.

11. Resume the normal boot process:

- a. Start the iLO remote console.

The iLO 5 Configuration Utility is still open from the previous session.


- b. Press ESC several times to navigate to the System Configuration page.

- c. To exit the System Utilities and resume the normal boot process, click **Exit** and resume system boot.

iLO is configured to use a static IP address. Continue with [Option 2: Connect to the Component CLI Using iLO](#).

Complete the Appliance Network Configuration

1. After connecting using either KVM Console or iLO, you should see this screen for Fidelis Network appliances version 9.4.1 or later.

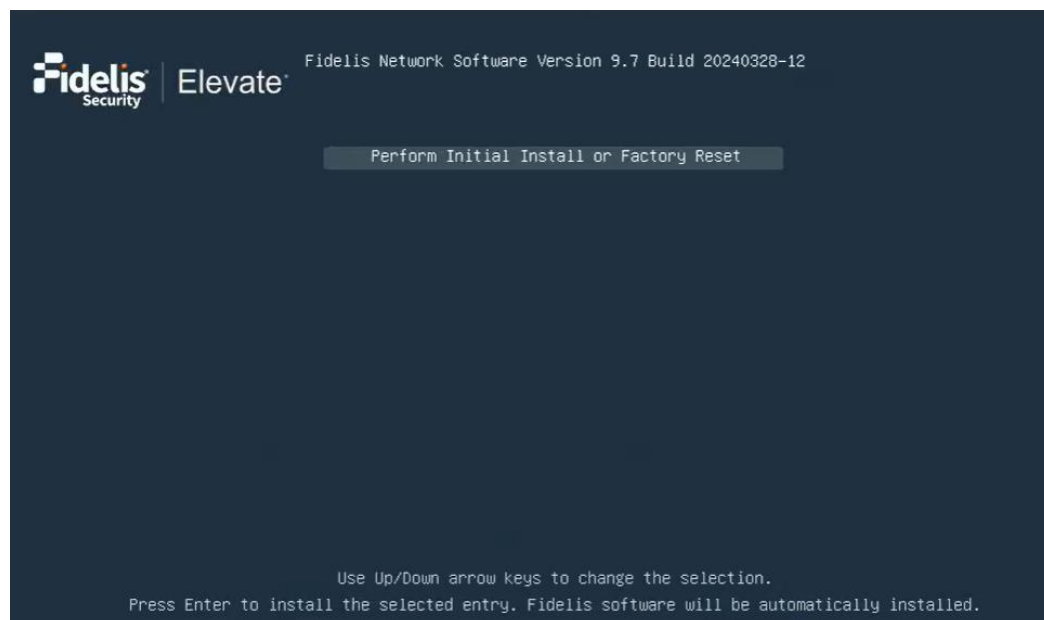

If you do not see the screen shown above, contact [Fidelis Technical Support](#).



2. With **Perform Initial Install or Factory Reset** selected, press Enter.



3. Use the Up and Down arrow keys to select Collector SA, and press Enter. If you need help determining the system type, see [Appendix C](#).

The system displays a screen with the message *Congratulations, your CentOS installation is complete*. The system will automatically reboot.

4. Directly attach an ethernet cable from a client system such as a laptop to the Admin/eth0 port on the appliance. The default IP address is 192.168.42.11/24. Assign a static IP from the same subnet to the network interface on the client system and connect to the appliance using SSH.
5. Use the following credentials at the login prompt. You will be required to change the password immediately.
 - **user:** fidelis
 - **default password:** fidelisspass

6. From the command line, run:

```
sudo /FSS/bin/setup
```

You will be prompted for the fidelis password.

7. With Setup, select **Network Settings**.



8. Configure the network parameters for the system and each active network interface.
 - Use the Network Configuration table you prepared earlier ([Appendix A](#)).
 - When complete, return to the top menu.
9. When complete, select **OK** to leave Setup.
10. From the command line, reboot the system:


```
sudo /fss/bin/shutdown.pl --user admin --reboot
```

8. Fidelis Network Integration

Register Collector SA with CommandPost

1. From the CommandPost user interface, navigate to: **Administration > Components**
2. Click **Add Component**.
3. Fill in the Add New Component popup:


Component Type	Select Collector
Name	Specify a “friendly” name for the Collector SA. This is <i>not</i> the fully qualified domain name of the Collector SA.
Description	Optionally, specify a description, for example, a location, business unit, etc.
IP Address	Specify the IP address of the Admin interface of the Collector SA appliance.

4. Click **Add Component**.
5. To register the Collector SA, click the  and select **Register**.

Accept the End User License Agreement (EULA). The CommandPost begins communicating with the Collector SA at the specified IP address.



Link Collector SA to Fidelis Sensors


1. From the CommandPost user interface, navigate to: **Administration > Components**
2. For each sensor:
 - a. In the row for the sensor, click the  icon.
The system displays the Configure Component popup.
 - b. In the Configure Component popup, select **Direct**, **Internal**, **Mail**, or **Web** from the navigation on the left (based on the type of sensor).
 - c. Select the **Advanced** or **Metadata** tab.
 - d. In the **Send Metadata to Collector** field, select the Collector from the list.

Appendix A: Network Configuration Worksheet

Network Setting	Assignments	
Interface	Admin eth0	iLO / IPMI
Hostname (FQDN)		
Static IP Address		
Subnet Mask		
Gateway		
Proxy Server		
DNS Servers		
NTP Servers		
Time Zone		



Appendix B: System Specifications


Collector SA (Rev-K)	
	
Form Factor	1U rack-mount chassis SFF
CPU	Dual Intel Xeon Gold 6246R 16/32-core 3.4Ghz
TPM	TPM 2.0
Memory	256GB ECC DDR4 2933Mhz
Storage Capacity & Configuration	2x HDD 300 GB RAID-1 6x HDD 1.2 TB RAID-10 (3.6 TB Effective)
Network Adapters (Default Config)	4x 1GbE
Out-of-Band Management	Integrated Lights Out Management (iLO)
Power Supply	Dual hot-swap 800W High Efficiency AC power supplies
Dimensions	H: 4.29 cm (1.69 in) W: 43.46 cm (17.11 in) D: 70.7 cm (27.83 in)
Weight (approx.)	16.27 kg (35.86 lb)
Operating Temperature	10° to 35°C (50° to 95°F) at sea level
AC Input Requirements	100 - 120 VAC 200 - 240 VAC
BTU Rating (max)	3067 BTU/hr (100 VAC) 2958 BTU/hr (200 VAC) 2949 BTU/hr (240 VAC)



Appendix C: System Types

For versions 9.4.1 and later, the table below shows the software to apply based on the appliance SKU. (Note the SKU typically starts with “FNH”). You can find the SKU in the following locations:

- Appliance lid UID decal (see sample on right)
- Shipping carton decal (see sample on right)
- Packing list
- Purchase order
- Maintenance certificate

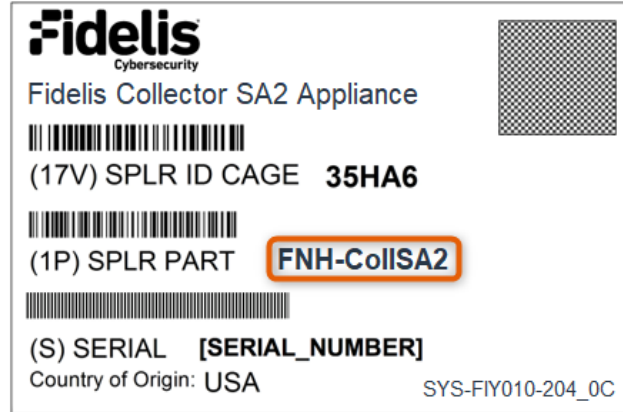

Appliance SKU	System Type
FNH-CoIIISA2	Collector SA

QSG_CollectorSA_Rev-K_20240624 (rebranded)

Source: Technical Support

